

LEKATO WS-70 MINI DIGITAL WIRELESS SYSTEM



Please read the instructions carefully before using this product

warning: In order to reduce the risk of fire or electric shock, please do not put the equipment in the rain or wet place

Note: please do not disassemble the equipment without permission. There is no part that can be repaired by the user. Please hand it over to qualified maintenance personnel

- ① Please use the attached charging line for charging. If you are unsure of the type of power available, please consult your dealer.
- ② The device has a built-in lithium battery. Please do not put it into the fire or near the heat source.
- ③ This equipment is not waterproof, do not put into water or other liquids.
- ④ Please do not attempt to repair the equipment, because open the lid after may make you touch the danger point voltage or other risks, if this equipment is the need for maintenance, please to qualified maintenance personnel for repair.
- ⑤ If you are not using this product for a long time, you should unplug the charging cable.
- ⑥ Avoid the power cord being trampled or the position of the socket and the connecting device being too tight at the plug.

Website: www.lekatodeal.com

E-mail: support@lekatodeal.com

Specification

Channel	70 channel	System frequency response	20~20KHz
Distortion	<0.05%	Reception sensitivity	< -110dbm @20dbsinad
Signal-to-noise ratio	> 85dB	Transmission distance	25~40m
Latency	< 3 ms	Full working hours	>4.5 hours(circumstantial)

Wireless System

WS-70 is a mini wireless system, apply with 6.35mm audio devices, with strong anti-interference ability, through the obstacles of strong, stable transmission no pause etc in order to avoid signal attenuation, wireless system should be close to acting area as far as possible, and with a large metal, wall, scaffolding and other objects at least keep a distance of 1.5 meters, and as far as possible to ensure that between transmitter and receiver are empty signal direct way. To avoid being unable to use due to low battery, please kindly check the batteries are good before use.

Package contents



Transmitter X 1



Receiver X 1




USB charging cable X 1




User manual X 1

Product Introduction



6.35mm plug

Button




USB charging port



Code Button

Check battery capacity

- When the device is shut down or started up, double-click the front button, and the four green lights on the side will display the current power information, which will be off after 3 seconds.

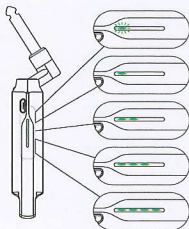

When the first light flashes, it indicates that the power is lower than 20%. At this point, the transmitter (receiver) needs to be charged.

One green light keeps on, means 20%-40% battery

Two green lights keeps on, means 41%-60% battery

Three green lights keeps on, means 61%-80% battery


Four green lights keeps on, means 81%-100% battery

Device charging


- Our product uses polymer lithium battery. Please charge the product before using it. If not used for a long time, charge the product once or more than three months.

- With Dual-ended USB cable that can charge both the receiver and transmitter, please choose 5V 2A adapter for charging.

* No charger plug included

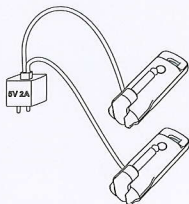

- When charging, the battery capacity is displayed as the picture

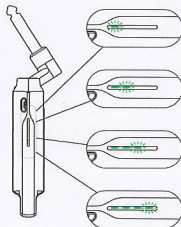

The first light is flickering, the battery was charged 1%-25%.


The second light is flickering, the battery was charged 26%-50%.

The third light is flickering, the battery was charged 51%-75%.

The fourth light is flickering, the battery was charged 75%-100%.

Device on / off

- Power on: Long press the button for 2 seconds when the transmitter and receiver are in power off state. The LED indicator light is always green, the device power on successfully. Enter normal working condition.
- Power off: Long press the button for 2 seconds while the transmitter and receiver are in power on state. The LED indicator light is off and the device shut down successfully.
- * After power on, the green light of the transmitter is always on, while the green light of the receiver is flashing, indicating that the device is not connected normally.

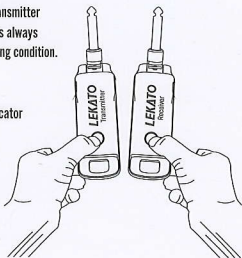

Device Testing


- Connect the transmitter to the guitar and the receiver to the sound, long press the start button of transmitter and receiver, the green lights of the transmitter and receiver always keeps on, enter normal working condition. If the following situations occurs, please solve as follows.

Not pairing successfully: If the transmitter green light keeps on and the receiver red light flashing, proves that the pairing is not successful. Should restart the transmitter and receiver.

No sound after pairing: If there is no green light on both the transmitter and receiver, no sound when playing, you can try to re-pairing the products.


Device frequency hopping

When using the device, there are signal interference around the device that cause the device not work properly. Frequency hopping can be performed on the device.

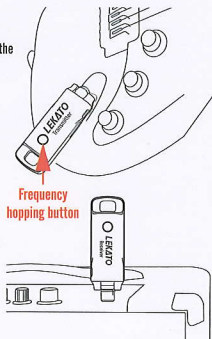

Reset code paring

- This product has been set by default before delivery and can be used directly after starting up. If the product can't be used directly, try to reset the code.

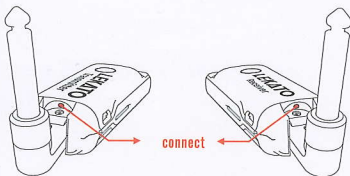


Pair code: When a transmitter connected with multiple receiver or transmitter and receiver are not the original equipment, can be long press on the code button to red light flashing, when transmitting terminal and receiving end normally on a green light, namely to code success!

More on other features

- WS-70 can support 70 sets to use at the same time without interference. When using multiple WS-70, please turn on and test the wireless transceiver one to one to avoid signal crossing.

After the test of each pair of wireless system is completed, then start and test the next pair of wireless system. If there is any signal interference during test period, can choose Frequency hopping key to frequency hopping.

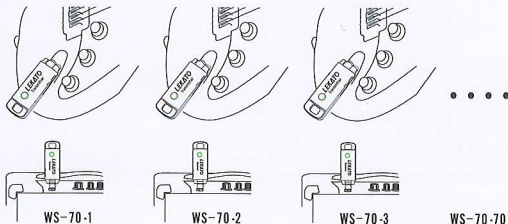

Device debugging

- A WS-70 transmitter can be used with multiple WS-70 receivers.

For example :There are four effects on a stage, you can use one WS-70 transmitter and four WS-70 receivers
Connect and performances at the same time!

Device debugging:

After turn off all the similar wireless system, use thin iron wire to long press the code button and release the button until the red light flashing on four receivers. Use thin iron wire to long press the code button of one transmitter, release the button when the red light flashing on the transmitter and all the receivers. It will cost 20 seconds. When the green light of transmitter and receivers is always on, four receivers can receive signal from one transmitter at the same time. One-to-many functions can be realized. All code debugging time should be completed within 20 seconds.

